

Handy-Mag **Auto** **III**



CST **CLEVELAND**
EE **0**

474 E. 105th Street
Cleveland, OH 44108-1378
(216) 681-7400 Fax (216) 681-7009
www.clevelandsteeltool.com E-mail: sales@clevelandsteeltool.com

800-446-4402

Table of Contents

Warranty	1
Safety Precautions	2
General Information.....	3
.....	3
Grounding Instructions/Extension Cords.....	4
Getting Started	5
Before the Cut	6
Changing Arbor to Optional Drill Chuck.....	6
Making the Cut	7
After the Cut	7
Operating Auto-Feed Feature.....	8
Safety Override System.....	8
Maintenance.....	9
Troubleshooting.....	10
Parts List.....	11-14

Handy-Mag III

Warranty


The Cleveland Steel Tool Company will, within one (1) year of date of purchase, replace or repair F.O.B. the factory, any goods, which are defective in materials and workmanship provided that the buyer returns the defective goods, freight prepaid, to the seller, which shall be the buyer's sole and exclusive remedy for the defective goods. THIS WARRANTY IS VOID IF YOU ATTEMPT REPAIRS YOURSELF. This warranty is void if the items have been damaged by accident, neglect, or other causes not arising out of defects in materials or workmanship. This warranty does not

are subject to respective manufacturer's warranties. In no event shall The Cleveland Steel Tool Co. be liable for loss or damage resulting directly or indirectly from the use of merchandise or from any other cause. The Cleveland Steel Tool Co. is not liable for any costs incurred on such

Proof of purchase date required

This warranty does not apply to machines and/or components which have been altered, changed

damages. Seller shall not be liable to the purchaser or any other person for loss, downtime, or



General Information

Warning:

Improperly connecting the grounding wire can result in the

Getting Started

Before the Cut

1. Select the correct pilot pin and place it in the cutter shank from the rear.



Troubleshooting

1. Magnetic base is not holding securely:



Parts List

Item	Description	Part No.	Qty Req.	
1	Set Screw M5 x 6	ME3001	5	\$1.05
2	Cutter Arbor <small>Complete (inc 125-132)</small>	ME3002	1	\$82.45
3	Water Seal	ME3003	1	\$6.60
4	Spring	ME3004	1	\$6.60
5	Main Drive Spindle	ME3005	1	\$49.45
6	Woodruff Key M5x5x10	ME3006	1	\$2.15
7	Oil Seal 22x32x7	ME3007	2	\$2.15
8				






Parts List

Item	Description	Part No.	Qty Req.
39	Coolant Tank Hanger	ME3039	1
40	Flat Washer 3/16x16x1	ME3040	2
41	Retaining Knob M5x16	ME3041	1
42	Coolant Tank	ME3042	1
43	Coolant Tap	ME3043	1
44	Coolant PU Tube	ME3044	1
45	Conduit Gland	ME3045	1
46	Main Body Assy	ME3046	1
47	Set Screw M5x20	ME3047	8
48	Nut M5	ME3048	8
49	Brass Slide Right	ME3049	1
50	Steel Strip Tensioner	ME3050	1
51	Brass Slide Left	ME3051	1
52	Electro-Magnet Switch	ME3052	1
53	Motor Switch Button On	ME3053	1
54	Bushing	ME3054	2
55	Motor Switch Button Off	ME3055	1
56	Front Switch Panel	ME3056	1
57	Screw M4x16	ME3057	4
58	Selector Cam	ME3058	1
59	Screw & Washer	ME3059	1
60	Switch Plate Bar Short	ME3060	2
61	Engagement Ball M5	ME3061	8
62	Crank Spindle	ME3062	1
63	Handle Grip	ME3063	3
64	Rear Cover Plate	ME3064	1
65	Screw M3.5x6	ME3065	4
66	Pan Head Screw M4x8	ME3066	7
67	Stroke Limiting Switch	ME3067	1
68	Electronic Unit 110V	ME3068	1
69	Star Washer M4	ME3069	1
70	Power Cord	ME3070	1
71	Pan Head Screw M4x6	ME3071	1
72	Electro-Magnet	ME3072	1
73	Arbor Support Bracket	ME3073	1
74	Arbor Support Bearing <small>HK3516</small>	ME3074	1
75	Spring Washer M8	ME3075	3
76	Hex Head Screw M8	ME3076	3
77	Combination Wrench M8	ME3077	1
78	Hex Wrench M2.5	ME3078	1

Parts List

Item	Description	Part No.	Qty Req.
117	Cord Protector	ME3117	1
118	Hex Nut M4x8	ME3118	2
119	Hex Nut	ME3119	1
120	Flat Washer 1/2x24x2.5	ME3120	1
121	O-Ring 7.5x1.5	ME3121	1
122	Limit Switch Pin 2.2x10	ME3122	2
123	Set Screw M8x8	ME3123	3
124	Capacitor	ME3124	1
125	Circlip	ME3125	1
126	Collar	ME3126	1
127	Return Spring	ME3127	1
128	Spring Retainer Ring	ME3128	1
129	Set Screw M3x12	ME3129	1
130	Lock Pin	ME3130	1
131	Screw M3x6	ME3131	1
132	Flat Spring	ME3132	1
133	Hex Bolt M8x60	ME3133	1
134	Screw M4x10	ME3134	2

Parts Breakdown

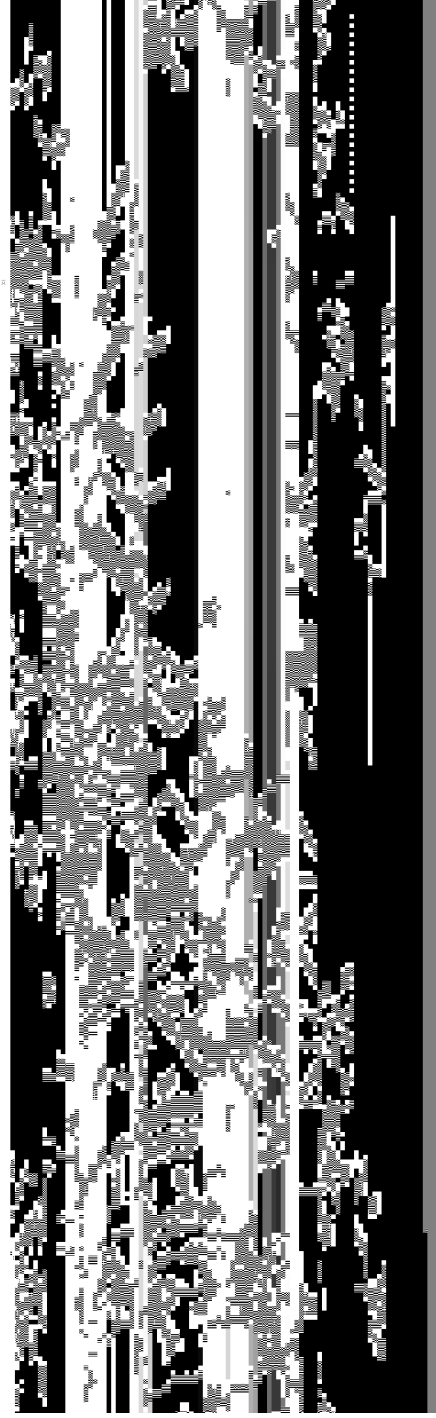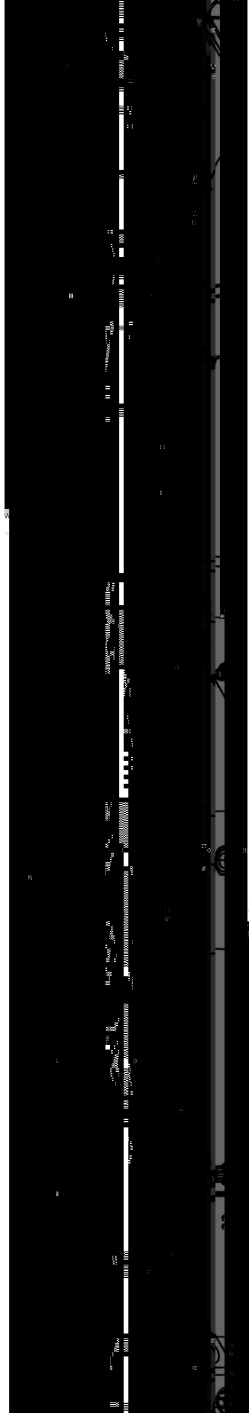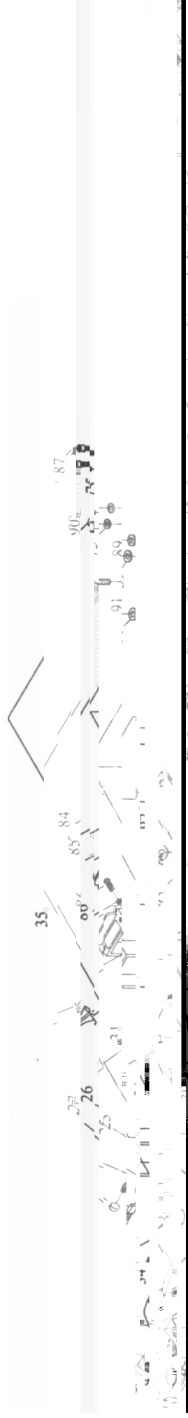

Handy-Mag *Auto*

